
SOMFY INSTRUCTIONS Sunis WireFree™ RTS Sun Sensor

Part # 9013075

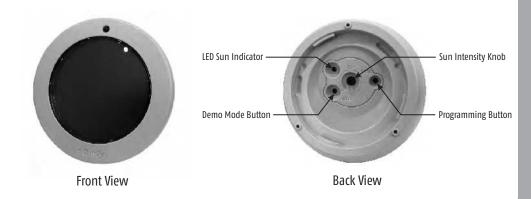

1. Place Sunis in a sunny area to charge for 10 minutes.



2. Completely retract the awning. Then press the Programming Button on the back of the original remote using a paper clip, pen or similar device until the awning jogs.



3. Press the Programming Button on the back of the Sunis until the awning jogs.



4. Turn intensity knob on the Sunis completely counter clockwise and allow direct sunlight to shine on the front for 2 minutes.



5. The awning should extend. Make adjustments to the sensitivity and mount it in the path of direct sunlight.

NOTE: If professional programming assistance is required, please contact Somfy at somfytech@somfy.com or your local dealer at www.somfysystems.com/locatedealer.

